

SEAFARER WICKER SERVING CART

(Item# FI-6128)



FOR CUSTOMER SERVICE, PLEASE WRITE OR CALL

FOREMOST INTERNATIONAL
906 MURRAY ROAD
EAST HANOVER, NJ07936

TEL: 800-443-1410

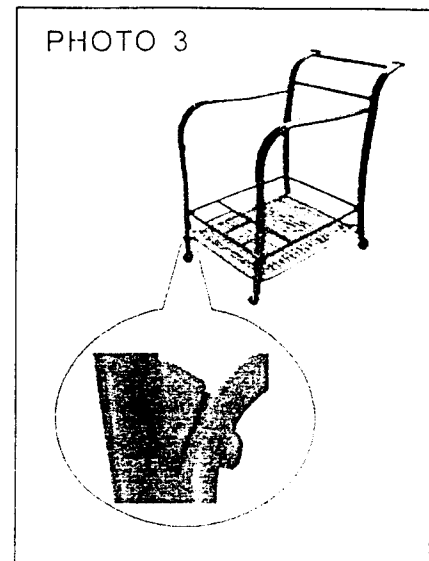
FAX: 973-428-6166

EMAIL: customerservice@foremostgroups.com

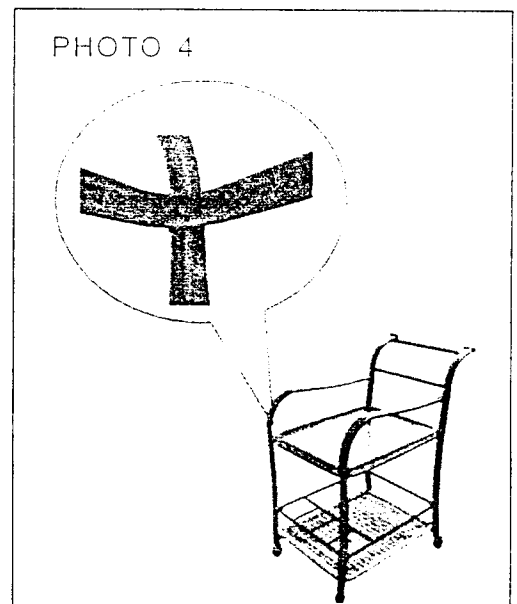
WEB SITE: www.fitnjo.com

5. Attach the Shelf Bracket (D) to the holes of Back Leg Unit (A), Front Right Leg (B), and Front Left Leg (C) loosely. Align four holes on the Shelf Bracket (D) to the Back Leg Unit (A), Front Right Leg (B), and Front Left Leg (C) by inserting the Bolt (F) through Plastic Washer (I) from the Shelf Bracket (D) to secure into the four legs with the use of Hex Screw Driver (J). See Figure 3.

Note: Do not tighten any bolts on this step.



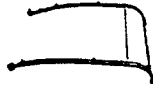




 
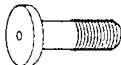
 

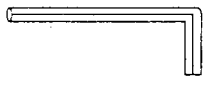

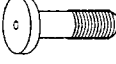
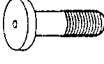


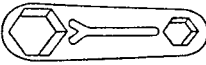
6. Attach the Top Glass Shelf (E) to the holes of Back Leg Unit (A), Front Right Leg (B), and Front Left Leg (C) loosely. Align four holes on the Glass Shelf (E) to the Back Leg Unit (A), Front Right Leg (B), and Front Left Leg (C) by inserting the Bolt (M) through Plastic Washer (I) from the Glass Shelf (E) to secure into the four legs with the use of Hex Screw Driver (J). See Figure 4.



7. Tighten all Bolts and Nuts (N) with Hex Screw Driver (J) and Wrench (P) and cover them with the PVC Bolt Covers (H) and PVC Nut Cover (O).

Your serving cart is now ready to use.

PARTS LIST

	Description	Picture	Qty
A	Back Leg Unit		1
B	Front Right Leg		1
C	Front Left Leg		1
D	Shelf Bracket		1
E	Glass Shelf		1
F	Bolt M6*25MM		4
G	Bolt M6*45MM		4
H	PVC Bolt Cover		16
I	Plastic Washer		20
J	Hex Screw Driver		2
K	Wicker Shelf		1
L	Bolt M6*30mm		4
M	Bolt M6*20mm		4
N	Nut		4
O	PVC Nut Cover		4
P	Wrench		1

ASSEMBLY INSTRUCTIONS

1. Take all components out from the carton and place them on a flat surface area.
2. Identify all the parts packed in the carton against the parts list.
3. Attach the Front Right Leg (B) and Front Left Leg (C) into the Back Leg Unit (A) loosely. Align the holes on the Front Right Leg (B) to the Back Leg Unit (A) by inserting the Bolt (L) through the Plastic Washer (I) from the Back Leg Unit (A) to secure into the Front Right Leg (B) with the use of Hex Screw Driver (J). At this point, do not secure them tightly. See Figure 1. Repeat the same procedure for the Front left Leg (C).

Note: The numbered label on the Front Right Leg (B) and Front Left Leg (C) should coincide with the numbered label on the Back Leg Unit (A).

4. Attach the Wicker Shelf (K) to the bottom holes of Back Leg Unit (A), Front Right Leg (B), and Front Left Leg (C) loosely. Align four holes on the Wicker Shelf (K) to the Back Leg Unit (A), Front Right Leg (B), and Front Left Leg (C) by inserting the Bolt (G) through Plastic Washer (I) from the Wicker Shelf (K) to secure into the Back Leg Unit (A) with Plastic Washer (I) and Nut (N) by using the Hex Screw Driver (J) and Wrench (P). See Figure 2.

Note: Do not tighten any bolts on this step.

