 


Fitnjoremost

**Model # : FI-SFPTCT
FI-SFPT**

SEAFARER PARTY TABLE W. CANOPY

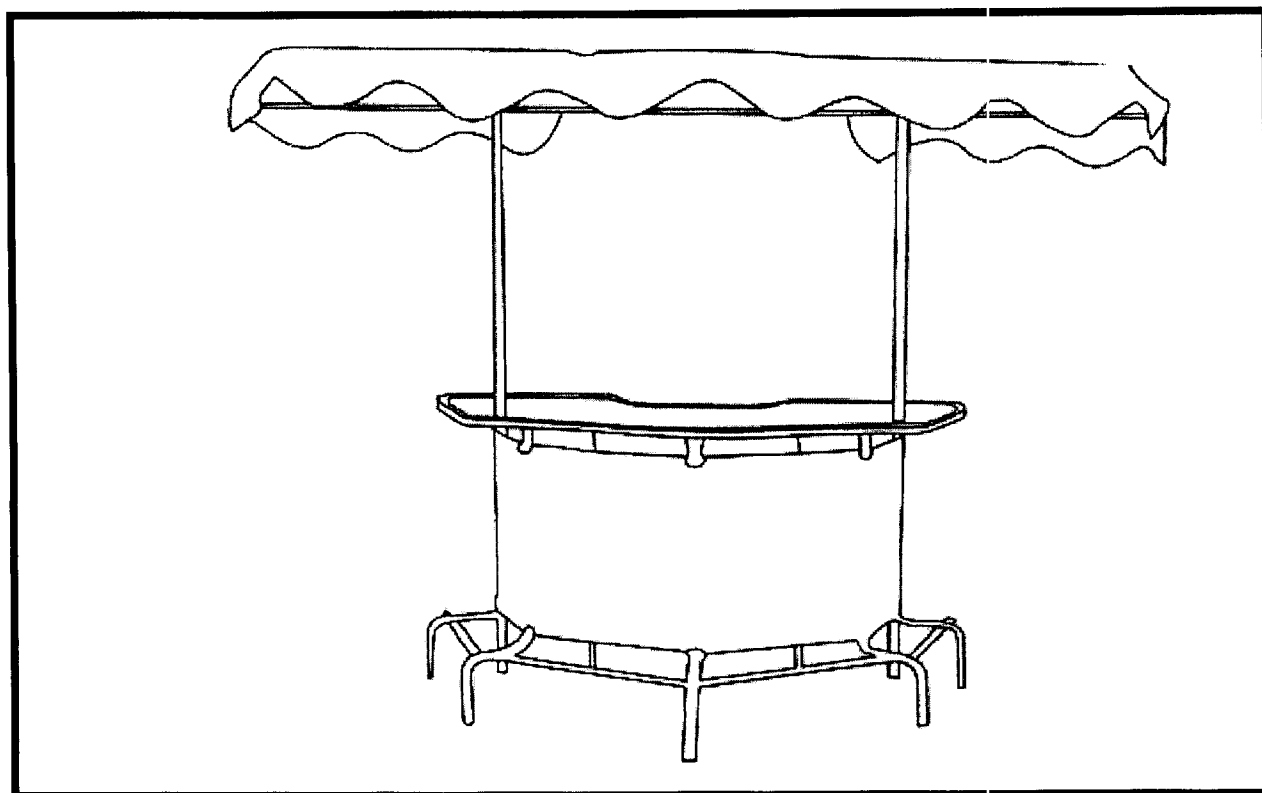

Toll Free Customer Assistance

1-800-443-1410

Monday-Friday 9:00a.m.– 9:00p.m. EST


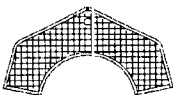





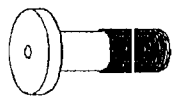





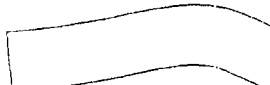
Fax: (973) 428-6166

E-Mail Address: customerservice@fitnjo.com








Website: www.fitnjo.com

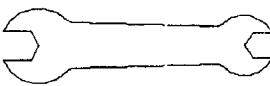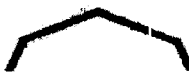Rev. 10/16/03

PARTS LIST

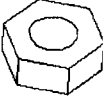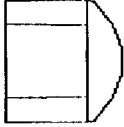PART	DESCRIPTION	PICTURE	QTY
A	TABLE RIM W. GLASS TOP		1
B	MESH SHELF		2
C	LEFT LEG W. POLE RINGS		1
C1	RIGHT LEG W. POLE RINGS		1
D	S-SHAPED CENTER SUPPORT LEGS		2
E	CENTER LEG		1
F	LONG BOLT		16
G	SHORT BOLT		15
H	LOCK WASHER		31
I	HEX SCREW DRIVER		1
J	OPEN HEX WRENCH		1
K	APRON BAR		2
L	FOOTREST BAR		1
M	APRON		1

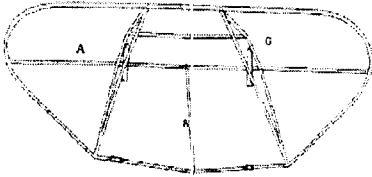PARTS LIST

PART	DESCRIPTION	PICTURE	QTY
N	NUT		31
O	NUT COVER		31
P	BOLT COVER		31
Q	BOTTOM CANOPY SUPPORT POLES		2
S	ASSEMBLED CANOPY FRAME		1
T	CANOPY COVER (Pre-attached to assembled canopy frame)		1
U	SUPPORT BAR		2

WARNING!

- Do not step on the glass during assembly as it will break.
- Dining tables have a 200 lbs weight capacity.
- Do not put hot items directly on the glass top.
- Tempered glass when shattered will break into tiny pieces as a safety precaution.
- Always use an umbrella base with an umbrella.
- Close the umbrella when not in use and during windy conditions.
- Chairs have a 250 lbs weight capacity.

Please read instructions carefully and thoroughly before assembling. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

Place table on a carpeted flat surface to prevent scratching.

1

Carefully place the table rim with glass top (A) on a soft surface, with the underside facing up. Insert left leg with pole rings (C), right leg with pole rings (C1), s-shaped center support legs (D), and the center leg (E) into the leg brackets attached to the inside of the table rim.

(Figure 1)

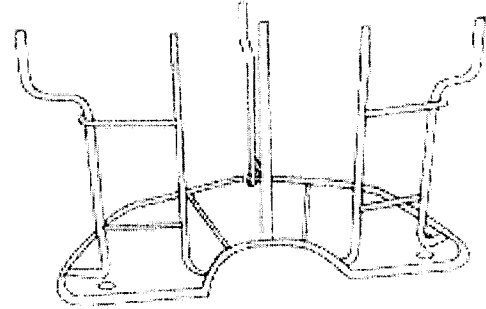 


Figure 1

2

Place the top mesh shelf (B) between the legs and secure loosely to the legs using the long bolts (F), through lock washers (H) and secure with nuts (N). Repeat the same procedure to secure the bottom shelf to the legs. Tighten bolts (F) and nuts (N) with hex screw driver (I) and open hex wrench (J). With the help of another person, carefully turn the table to the upright position.

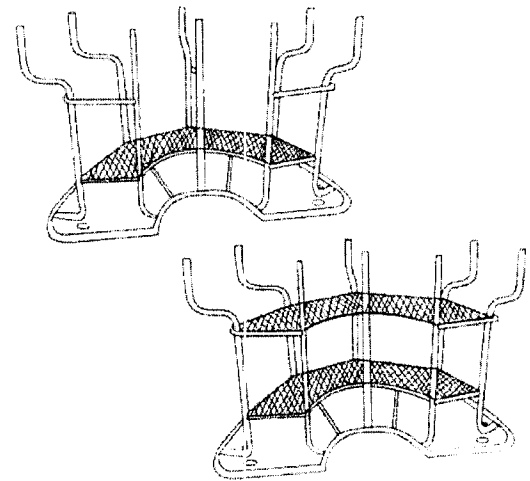 


Figure 2

3

Attach the footrest bar (L) to the legs using short bolts (G), through lock washers (H) and secure with nuts (N). Tighten bolts (G) and nuts (N) with hex screw driver (I) and open hex wrench (J).

(Figure 3)

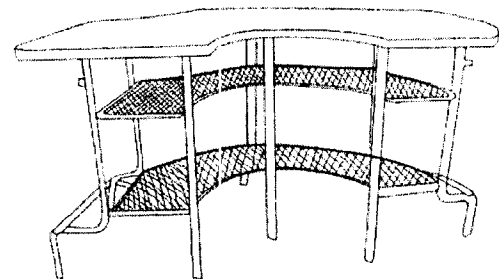 


Figure 3

4

Attach the top apron bar (K) to the legs using short bolts (G), through lock washers (H) and secure with nuts (N). Tighten bolts (G) and nuts (N) with hex screw driver (I) and open hex wrench (J).

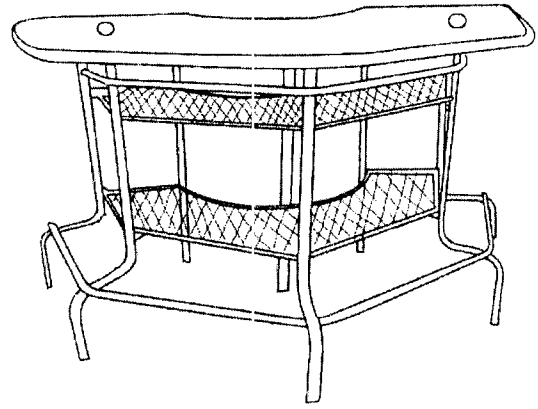 


Figure 4

5

Insert the canopy bottom support poles (Q), with the snap-in pinholes towards the top of the table, into the pole rings on the end legs.

(Figure 5)

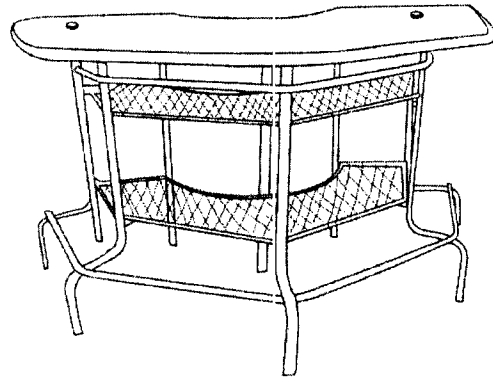 


Figure 5

6

Slide the bottom apron bar (K) through the fully sewn apron slip (**not the velcro end**).

(Figure 6)

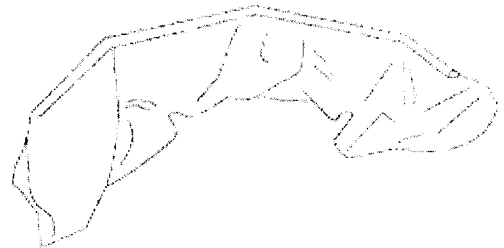 


Figure 6

7

Attach the bottom apron bar with apron to the legs using the short bolts (G), through washers (H), and secure with nuts (N). Tighten bolts (G) and nuts (N) with hex screw driver (I) and open hex wrench (J).

(Figure 7)

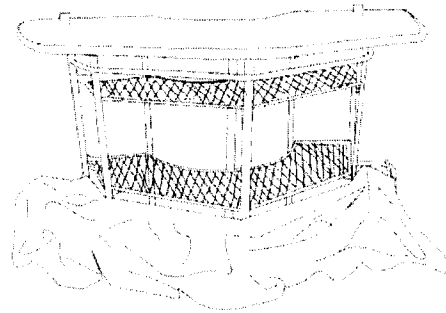 


Figure 7

8

Secure the top ends of the apron (M) to the top apron bar by folding the velcro ends around the apron bar evenly. Then secure the side ends of the apron (M) to the end legs with pole rings (C) in the same way.

(Figure 8)

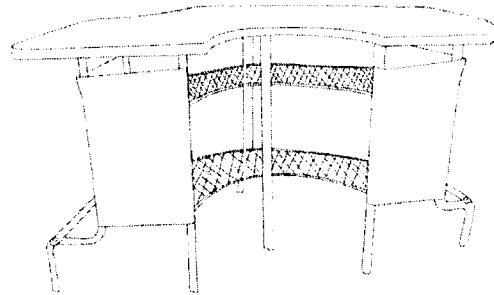 


Figure 8

9

Cover all the bolts (F & G) with the bolt covers (P) and all the nuts with the nut covers (O).

10

Insert the support bars (U) into the left and right canopy support bar receivers. Make sure the snap button on the support bars (U) are engaged in the buttonhole on the left and right support bar receivers.

(Figure 9)

 
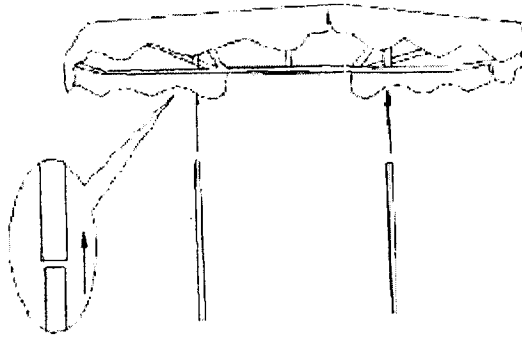 


Figure 9

11

With the help of another person, carefully lift up the finished canopy to the upright position and simultaneously insert both support bars (U) into the openings on the bar table. Make sure the snap button holes on the support bars (U) are engaged in the button hole on the bottom canopy support poles (Q). Now your table is ready for your enjoyment.

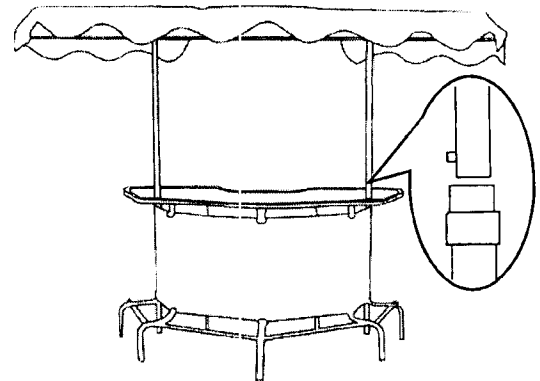

NOTE:

- Repeated assembly can weaken the locking ability of the washers. Periodically check to make sure the bolts are tight.
- Remove the canopy by detaching the support bars from the left support bar receiver and the right support bar receiver for easy storage.
- Do not leave the canopy up during windy conditions
- Store in a safe place during long periods of non-use to prolong the life of your furniture.
- Retain these instructions for future use.

CARE AND MAINTENANCE

All chairs and table frames should be washed with a mild soap and water solution. Rinse with clean water and dry with a soft towel. Do not use bleach or strong solvents to clean patio furniture. To maintain and protect the furniture, always cover it with an outdoor furniture cover or store in a safe area when not in use for long periods of time. Caution should be used when using oils, lotions and other chemicals such as chlorine or repeated exposure to extreme weather conditions (including heat), which may cause permanent discoloration to the fabric. Cushions should be taken in and stored in a dry area during rain. Should cushions get wet, please hang over chair frame to drip dry completely before using and storing. In areas where heavy snowfall occurs, do not allow snow to build-up on the table top, as breakage may occur due to weight limitations being exceeded.

1 YEAR LIMITED WARRANTY

This product is covered under the Foremost International 1 Year Limited Warranty. To ensure your complete satisfaction, this warrants the original purchaser that this furniture is free from structural defects in the frame, as of the date of purchase and that it will, under normal use and proper care, remain so for 1 year after the date of purchase. If the furniture is found to be defective during the warranty period, we will repair or replace it at our discretion. Foremost has the right to make substitutions with similar merchandise should the model or color in question ~~is~~ no longer available.

This warranty does not cover furniture used for commercial purposes, failures caused by improper care, unreasonable or abusive use, improper assembly, hardware against corrosion or rusting, freeze damage, acts of God, fabric stains, mildew, fading, glass breakage, loss of use, inconvenience, or any other incidental damages. **Customers are responsible for freight and handling charges for all warranty and purchased parts from our customer service center.** Proof of purchase (dated cash register receipts) and photographic images depicting damages are required for warranty claims.

To obtain warranty service, please contact Foremost International Customer Relations Department at (800) 443-1410, between the hours of 9:00 am and 9:00 pm EST, Monday thru Friday; or fax your request to (973) 428-6166 or email us at customerservice@fitnjo.com or visit our website at www.fitnjo.com.