


SEAFARER WICKER SWIVEL BAR STOOL

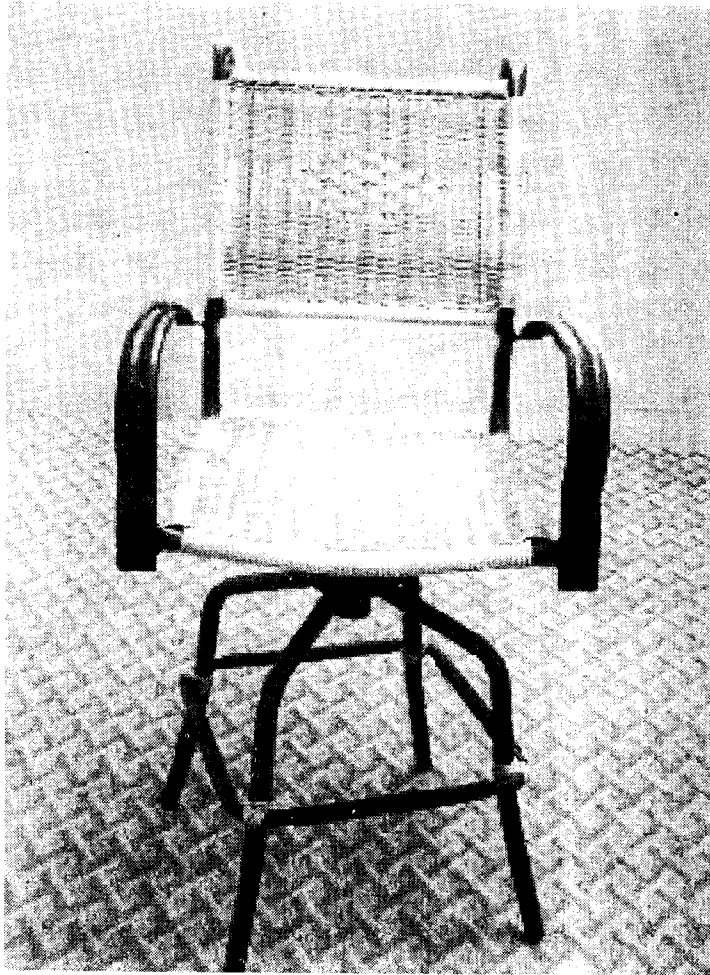

FOR CUSTOMER SERVICE, PLEASE WRITE OR CALL:








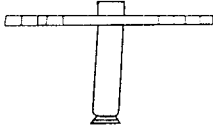

FOREMOST INTERNATIONAL
906 MURRAY ROAD
EAST HANOVER, NJ 07936

TEL: 1-800-443-1410

FAX: 1-973-428-6166

EMAIL: customerservice@foremostgroups.com

Visit our web site at www.fitnjo.com

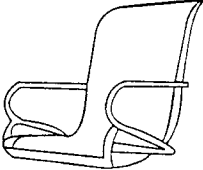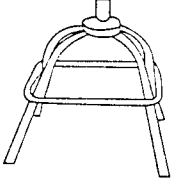NO.	QTY	PARTS LIST (FOR 4 CHAIRS)	
A	4	CHAIR SEAT	
B	4	CHAIR BASE	
C	16	STEEL PLATE	
D	16	BOLT	
E	16	NUT	
F	16	WASHER	
G	16	PVC BOLT COVER	
H	4	T-ROCK	
I	2	COMBINATION WRENCH	

ASSEMBLY INSTRUCTION

STEP 1: REMOVE ALL COMPONENTS FROM THE CARTON AND PLACE THEM IN A FLAT OPEN SURFACE AREA. CHECK THE COMPONENTS AGAINST THE PARTS LIST.

STEP 2: PLACE THE CHAIR SEAT (A) UPSIDE DOWN ON A SOFT SURFACE TO AVOID SCRATCHING.

STEP 3: ALIGN THE T ROCK (H) TO THE HOLES ON THE FLAT BAR.

WARNING: MAKE SURE THAT THE ARROWS ON T-ROCK AND ON THE FLAT BAR ARE FACING FORWARD TO THE FRONT OF THE CHAIR SEAT. SEE PHOTO 1.

STEP 4: INSERT TWO BOLTS (D) THROUGH EACH HOLE IN THE STEEL PLATE (C) TO THE FLAT BAR AND THE T-ROCK (H) AS SHOWN IN THE PHOTO 2.

STEP 5: ATTACH ANOTHER PIECE OF STEEL PLATE (C) TO THE T-ROCK (H) AND TO THE FLAT BAR BY PLACING A WASHER (F) AND A NUT (E) AT THE END OF EACH BOLT (D). SEE PHOTO 3.

STEP 6: TIGHTEN ALL BOLTS AND NUTS BY USING COMBINATION WRENCH (I) PROVIDED.

REPEAT THE SAME PROCEDURE FOR OTHER SIDE OF T-ROCK.
SEE PHOTO 4

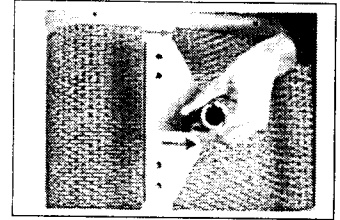


PHOTO 1

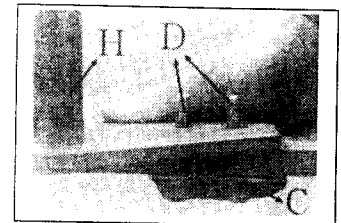


PHOTO 2

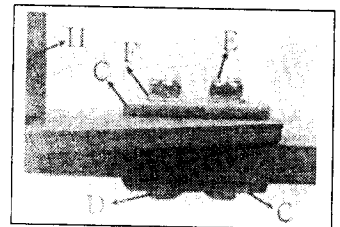


PHOTO 3

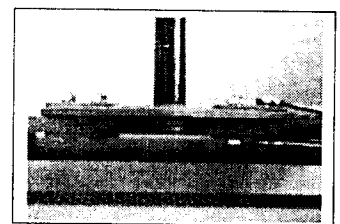


PHOTO 4

STEP 7: COVER ALL TOP OF BOLTS WITH PVC COVERS(G).
SET PHOTO 5

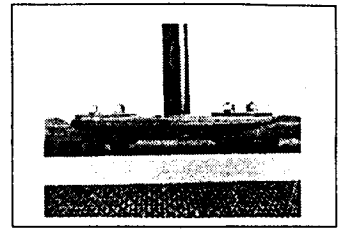


PHOTO 5

STEP 8: ALIGN THE SWIVEL CHAIR STEM WITH THE
CENTER OF THE SWIVEL CHAIR BASE. PUSH DOWN
FIRMLY TO LOCK SEAT FRAME (A) INTO THE BASE (B)
SEE PHOTO 6

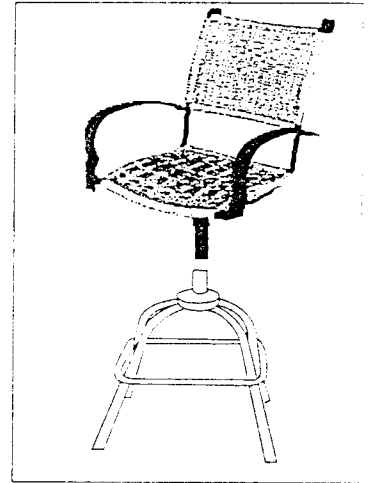


PHOTO 6

STEP 9: REPEAT THE ABOVE SAME PROCEDURE FOR
THE OTHER CHAIRS.YOUR SWIVEL BAR STOOL IS
NOW READY TO ENJOY.
SEE PHOTO 7

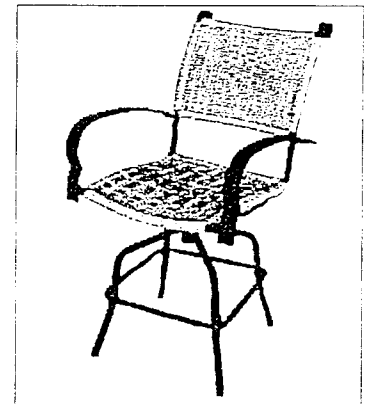


PHOTO 7